



rba

SHARPS DISPOSAL SERIES



Materials

SD001: Constructed of Heavy Gauge 1.6mm Mild Steel [pre-primed] powder coated safety yellow. 4 Fixing points at rear. A 25mm diameter hole is centred on the top panel to accept used syringes. Includes directional sticker. Fixings & wall plugs by others.

SD001-S: As above, but constructed of Heavy Gauge 1.6mm Stainless Steel. Type 304 with #4 Satin Finish.

SD001-B: Yellow disposable sharps container for housing inside SD001 or SD001-S.


Designers Note: Both SD001 [yellow] & SD001-S [Stainless Steel] are provided with 1 x SD001-B [Disposable container] for safety.

Installation

Ensure wall construction is suitable to support the unit. Mount unit to wall through 4 fixing holes. Fixings & wall plugs by others.

Operation

Replaceable disposable plastic Sharps container [SD001-B] is accessed from Yellow Mild Steel [SD001] or #304 Brushed Stainless Steel [SD001-S] Sharps Container housing by turning key in lock on faceplate and removing fully from matching wall bracket. Only Approved or Contracted agents should perform servicing of Sharps containers.

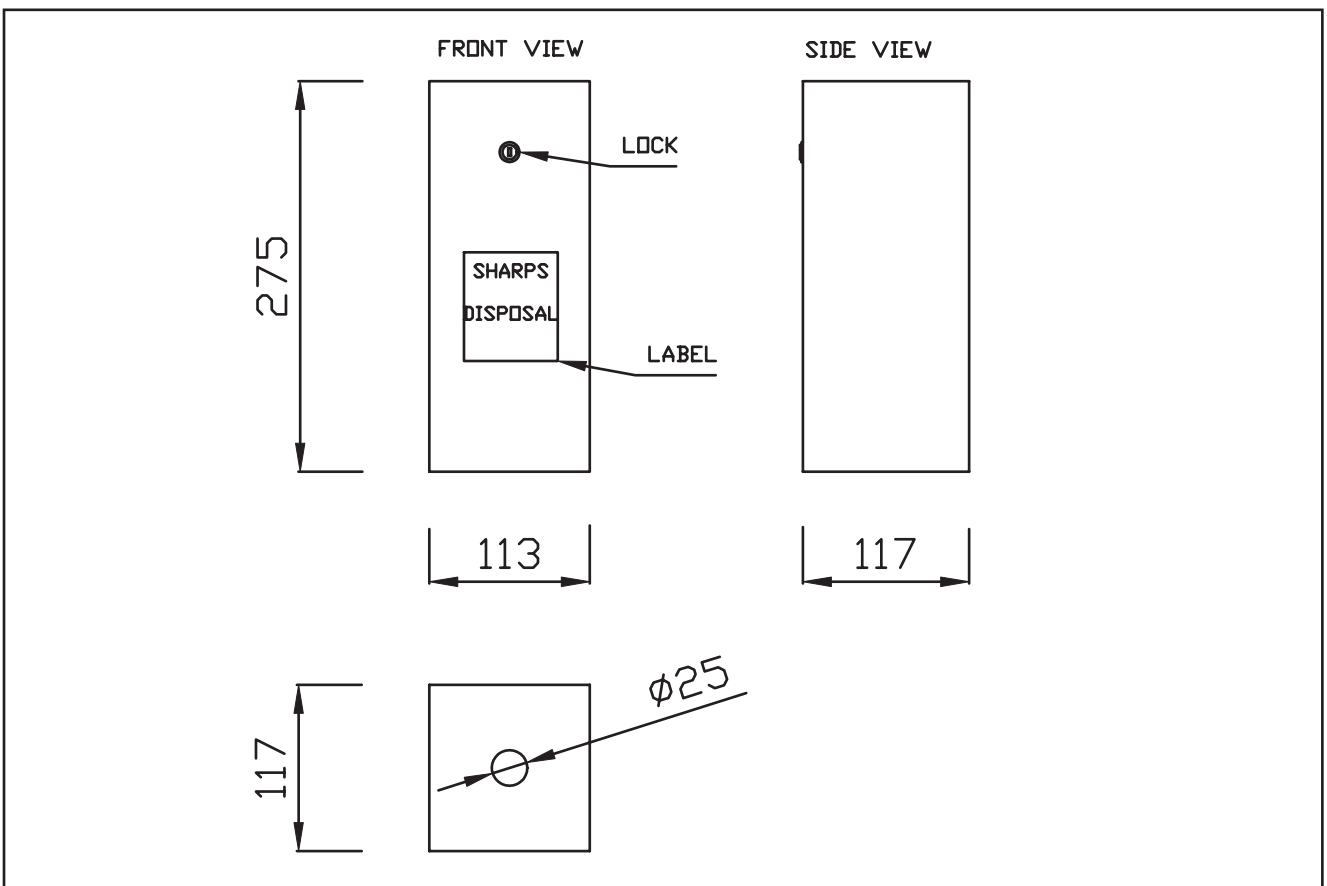

Important: Installation instructions and current rough-in details should be furnished with each fixture. Do not rough in without certified dimensions. Dimensions are subject to manufacturer's tolerance of +/-10mm.

As improvements in the design and performance of RBA products are continuous, specifications may be subject to change without notice.